6-2D-LM65-046 Rev.00

Ф3.3mm 650nm Laser Module

Features

APC (auto power control) IC inside Low current consumption of the APC circuit Much smaller LD module Surge current protection High quality lens for output beam



Absolute maximum ratings


Parameter	Symbol	Rating	Unit
Power supply voltage	Vcc	3.3	V
Laser Module optical output power	Po	<5	mW
Operation temperature	Topr	0~40	°C
Storage temperature	Tstg	0~60	°C


Electrical and optical characteristics (T_c=25 °C)


Parameter	Symbol	Min.	Тур.	Max.	Unit	Conditions	
Wavelength	λ	-	655	-	nm	Po= 5mW	
Operation current	Гор	-	-	35	mA	Po= 5mW ; Vcc=3V	
Optical output power	Pout	3.7		5	mW		
Operation voltage	Vop	2.5	-	3.3	Volt		
Laser Beam spot size at 10m	<20mm						
Divergence angle	2 mrad						

^{*} Sufficient heat dissipation is required for CW operation.

Outline dimensions (Units: mm)

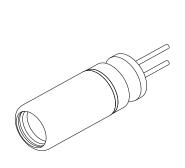

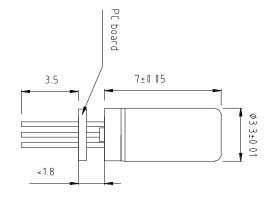






PHONE: 886-3-4699800 | FAX: 886-3-4699600

E-MAIL: Ldsales@arimalasers.com | www.arimalasers.com






6-2D-LM65-046 Rev.00


Ф3.3mm 650nm Laser Module


Instruction manual


DC Power connection mode 1


GND



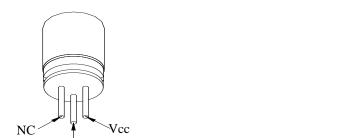






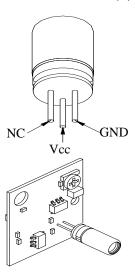

DC Power connection mode 2

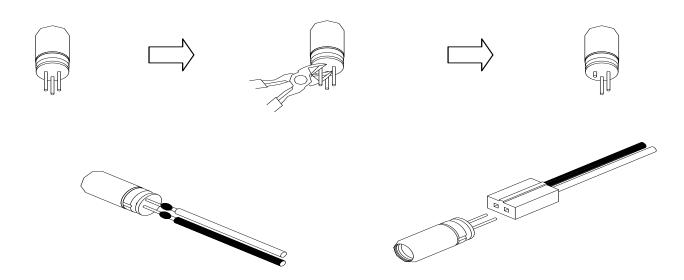

• Precautions

- * Do not operate the device above maximum ratings. Doing so may cause unexpected and permanent damage to the device.
- * Take precautions to avoid electrostatic discharge and/or momentary power spikes. A change in the characteristics of the laser or premature failure may result.
- * Proper heat sinking of the device assures stability and lifetime. Always ensure that maximum operating temperatures are not exceeded.
- * Observing visible or invisible laser beams with the human eye directly, or indirectly, can cause permanent damage. Use a camera to observe the laser.
- * No laser device should be used in any application or situation where life or property is at risk in event of device failure.
- * Specifications are subject to change without notice. Ensure that you have the latest specification by contacting us prior to purchase or use of the product.



PHONE: 886-3-4699800 | FAX: 886-3-4699600 E-MAIL: Ldsales@arimalasers.com | www.arimalasers.com



