Specification

Innolume GmbH Konrad-Adenauer-Allee 11 44263 Dortmund, Germany

SOA1340025YY22DBXXXX

High-gain Semiconductor Optical Amplifier





- High gain (22dB) at 1340nm
- High saturation output power (15dBm)
- · Strong linear polarization
- RoHS compliance
- · Proprietary anti-reflection coating technology enabling high reliability
- Polarization maintaining PM1310 fiber or HI1060 fiber
- 900um loose tube on fiber (optional)

Applications:

- Swept-source, tunable lasers
- Optical preamplifiers
- Datacom

Recommended Operating Conditions				
@ CW, the case is mounted on room temperature heatsink				
Parameter	Min.	Тур.	Max.	Unit
Chip Temperature	20	25	30	°C
Forward Current		1000	1250	mA
Input Optical Power	-25		10	dBm

Gain Characteristics				
@ CW, 25°C, 1000mA, with input signal dBm @ 1340nm				
Parameter	Min.	Тур.	Max.	Unit
Small Signal Gain	18	22		dB
Saturation Output Power (-3dB)	11	15		dBm
Wavelength of Gain Maximum	1330	1340	1355	nm
Gain Bandwidth (FWHM)	18	25		nm
Noise Figure*		7		dB

^{* -} NF = 10log10(2p_ase/Ghv) [D.Baney et al., Optical Fiber Techn. 6, 122 (2000)]

Amplified Spontaneous Emission (ASE) Characteristics				
@ CW, 25°C, 1000mA, no input signal				
Parameter	Min.	Тур.	Max.	Unit
Output Power (each port)		1		mW
Forward Voltage		1.6	1.9	V
Mean Wavelength		1315		nm
Bandwidth (FWHM)		25		nm
Ripples** (RMS)		0.1	0.2	dB
Polarisation Extinction Ratio (PER)	13	16		dB
Polarization		TE		

^{** -} measured in 1nm span around spectrum maximum with 20pm resolution

Specification

Innolume GmbH Konrad-Adenauer-Allee 11 44263 Dortmund, Germany


Absolute Maximum Ratings			
Parameter	Min	Max	Unit
Output Optical Power		200	mW
Input Optical Power		15	dBm
Forward Current		1500	mA
Reverse Voltage		2	V
TEC Current		3	Α
TEC Voltage		4	V
Chip Operating Temperature	10	50	°C
Case Operating Temperature	0	70	°C
Storage Temperature	-40	85	°C
Pin Soldering Temperature (max 10 sec, max case temperature 120°C)		300	°C
Fiber Band Radius	3		cm


Typical Performance (for reference only)

@ CW, the case is mounted on room temperature heatsink

Gain spectra at different currents


Gain and Output power vs. Input signal

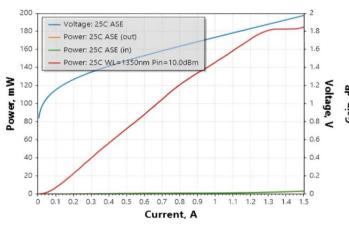


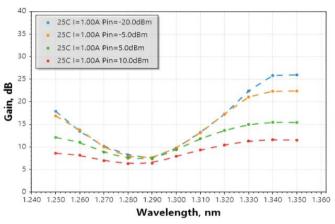

Gain spectra at different input signals

Spectra of amplified optical signal

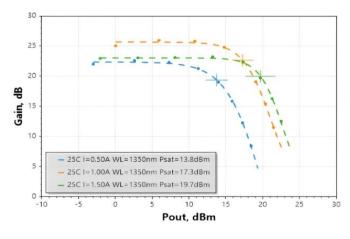

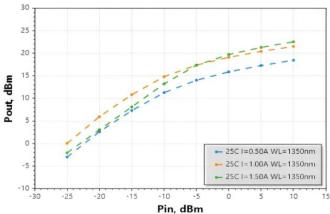


Fiber specification


Parameters



ASE Spectra (no input signal)

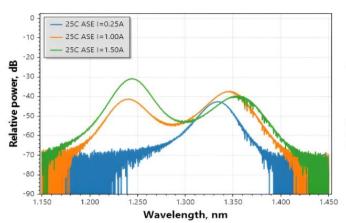

Output power at different input signals

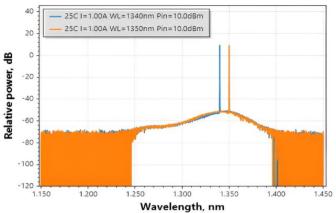


Value


Value

Unit

Thermistor specification			
Parameters	Value	Unit	
Туре	NTC		
Resistance @ 25°C	10±0.1	kOhm	
Beta 25-85°C	3435±1%	K	

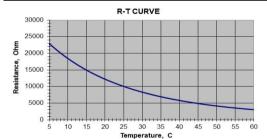


Fiber Type	HI1060	PM1300	
Numerical Aperture (Typical)	0.14	0.12	
Cut-off Wavelength	920±50	1200±70	nm
Mode-Field (core) Diameter	6.2±0.3 @1060nm	9.3±0.5 @1300nm	μm
Cladding Diameter	125±1	125±1	μm
Coating (buffer) Diameter	245±15	245±15	μm
Loose Tube Diameter (optional)	900	900	μm
Connector	FC/APC	FC/APC	
Key	narrow	narrow	



The output light is polarized along the slow axis of PM fiber.

Dimensions (in mm)

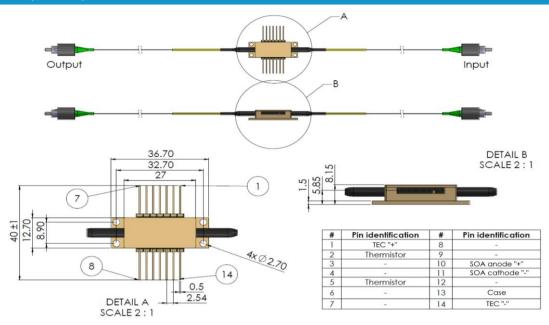

Safety and Operating Instructions

The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector. Absolute Maximum Ratings may be applied to the device for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the device outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot be exceeded. A proper heatsink for the device on thermal radiator is required. The device must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this.

Avoid back reflection to the device. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal facet damage. Using of optical isolators is highly recommended to block back reflection.

Do not pull the fiber. Do not bend a fiber with a radius smaller than 3 cm. Fiber tip should always be protected from any contamination or damage during the process of installation. After removing the dust-preventing cap covered at fiber tip, carefully clean fiber tip by wiping through one direction using optical lens cleaning paper or cotton swab dabbed with Iso-

ESD PROTECTION - Electrostatic discharge is the primary cause of unexpected product failure. Take extreme precaution to prevent ESD. During device installation, ESD protection has to be maintained - use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling the product.



Propanol or Ethyl alcohol. Operate the device with clean fiber connector only.







Specification

Innolume GmbH Konrad-Adenauer-Allee 11 44263 Dortmund, Germany

Part-number Identification

SOA1340025HI25DBXXXX -> 25dB gain at 1340nm gain maximum and 25nm gain bandwidth, HI-1060 fiber SOA1340025PM25DBLXXX -> 25dB gain at 1340nm gain maximum and 25nm gain bandwidth, PM-1310 fiber, with loose tube

NOTE: Innolume product specifications are subject to change without notice